



Poly-Classic®  
*Craftsman Series*


## Installation Instructions for Pyramid Cap

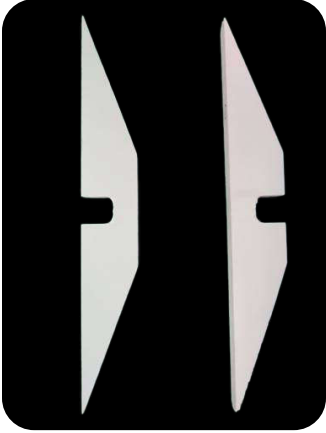

Follow normal newel post installation instructions (install the four sides of the newel just like a column, bracing inside near the top so it won't move), then put these two triangle pieces together in a cross.

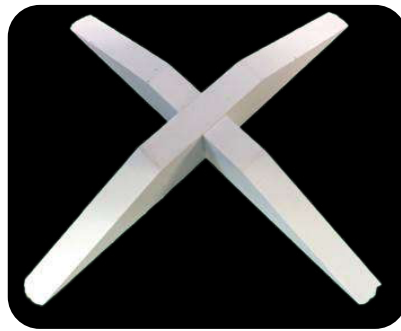

Attach the cross brace to the top of the newel shaft (glue and pin-nail).

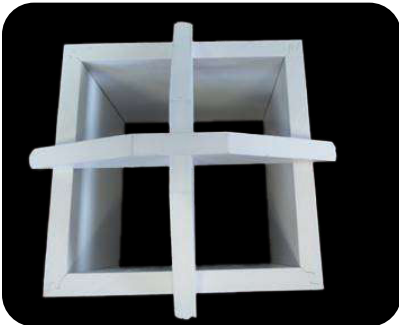

Apply adhesive to the flat cap part in the cut line (shown as open in photo below) then tape around the part to pull it square.



Apply adhesive to top of cross brace, place pyramid onto top of cross brace, center, and pin-nail onto cross brace.